

On-Line Set-up for XE-A207/217/307s

The XEA207, and XEA217, are set to communicate with a PC via their RS232C port (located at the back of the ECR) at factory default. The XEA307 is not you will need to set the RS port to ONLINE. It is set to scanner at default.

The communications parameters default to: Baud rate: 19200 bps
Terminal number 1

You can change the On-line settings at:

PGM > SETTING > DEVIC CONFIG

Some versions do not have
4 RS PORT, skip to last line
if 4 RS PORT is not listed.

```
SETTING ▲▼
7 DATE/TIME
8 OPTIONAL
9 REPORT
10 MESSAGE
11 DEVICE CONFIG
PGM 01
```

```
DEVICE CONFIG
1 KEYBOARD
2 DISPLAY
3 PRINTER
4 RS PORT
5 ONLINE
PGM 01
```

```
RS PORT
U USE [ ]
ONLINE
SCALE
EFT VERIFONE
PGM 01
```

```
RS PORT
USE ONLINE
PGM 01
```

```
DEVICE CONFIG
1 KEYBOARD
2 DISPLAY
3 PRINTER
4 RS PORT
5 ONLINE
PGM 01
```

```
ONLINE ▼
TERMINAL No. 000001
CI SIGNAL NON
LINE FORM FULL
BAUD RATE 19200
START CODE 002
END CODE 013
PGM 01
```