

Topic: CONFIGURING YOUR SHARP UP-800 FOR COMMUNICATIONS

The following instructions will help you to configure your Sharp UP-800 correctly for communications with SharpLynx Lite. You may need to contact your Sharp ECR/POS Dealer for assistance.

#### Set the Online Channel

1. Press **MODE**
2. Select **PGM2 MODE**
3. Select **SETTING**
4. Select **DEVICE CONFIG**
5. Select **ONLINE**
6. Enter **CHANNEL # = 1** (Attach serial cable to Channel 1 connector)
7. Press **TL/NS**

#### Set the Online Config

1. Press **MODE**
2. Select **PGM2 MODE**
3. Select **SETTING**
4. Select **ONLINE CONFIG**
5. Set the **TERMINAL No.** (Recommended setting = 000001)
6. Set the **BAUD RATE** (Recommended setting = 19200 bps)
7. **Important:** Do not change *CI SIGNAL, LINE FORM, START CODE, END CODE or TIME OUT settings*
8. Press **TL/NS**