


Topic: CONFIGURING YOUR AX/HX FOR COMMUNICATIONS

The following instructions will help you to configure your Uniwell AX/HX POS terminal correctly for communications with Uniwell Lynx Lite. You may need to contact your Uniwell Dealer for assistance.

Configure the IP Address


1. Sign On to your AX/HX POS Terminal
2. Go to **Configure > POS Setting**
3. Enter an IP Address and Subnet Mask
Note: Your AX/HX and your PC should be on the same subnet

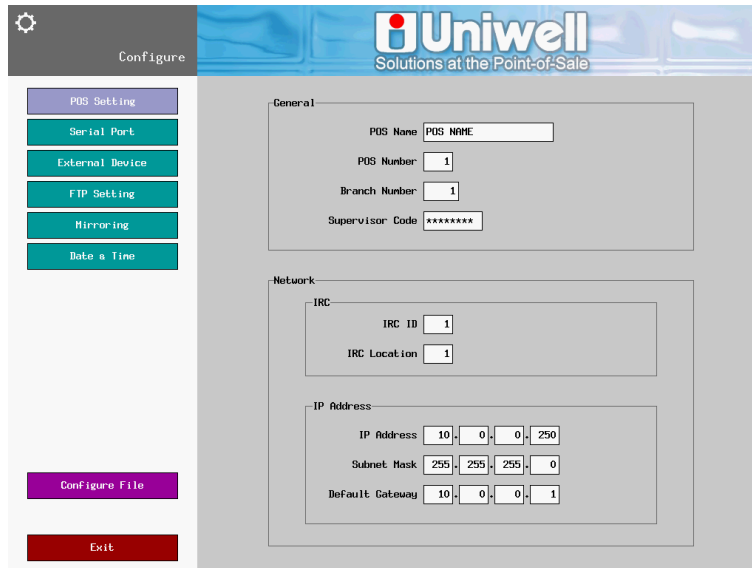

The screenshot shows the Uniwell configuration interface. On the left, a sidebar contains menu items: 'Configure' (selected), 'POS Setting', 'Serial Port', 'External Device', 'FTP Setting', 'Mirroring', and 'Date & Time'. Below these are buttons for 'Configure File' and 'Exit'. The main area is titled 'Uniwell Solutions at the Point-of-Sale' and is divided into sections: 'General' with fields for 'POS Name' (POS NAME), 'POS Number' (1), 'Branch Number' (1), and 'Supervisor Code' (*****); 'Network' with an 'IRC' section containing 'IRC ID' (1) and 'IRC Location' (1); and an 'IP Address' section with 'IP Address' (10.0.0.250), 'Subnet Mask' (255.255.255.0), and 'Default Gateway' (10.0.0.1).

Configure the FTP Server

1. Sign On to your AX/HX POS Terminal
2. Go to **Configure > FTP Setting**
3. Go to the **Server** tab
4. Enable User 1
5. Enable all options in the **Level** box for User 1

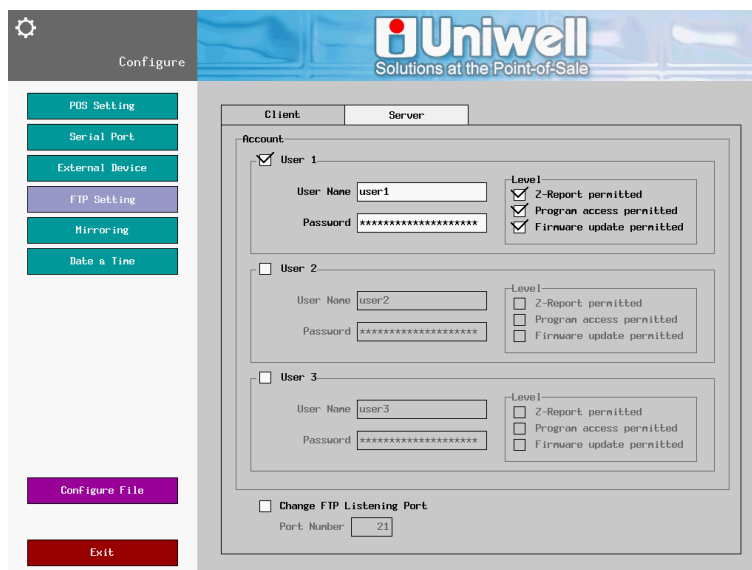

The screenshot shows the Uniwell configuration interface for FTP settings. The sidebar is the same as in the previous screenshot, but 'FTP Setting' is selected. The main area has tabs for 'Client' and 'Server' (selected). Under the 'Server' tab, there are three user accounts: 'User 1' (checked), 'User 2' (unchecked), and 'User 3' (unchecked). Each user has a 'User Name' and 'Password' field. 'User 1' has 'user1' and a masked password. To the right of each user is a 'Level' box with three options: '2-Report permitted', 'Program access permitted', and 'Firmware update permitted'. For 'User 1', all three are checked. For 'User 2' and 'User 3', all three are unchecked. At the bottom, there is a checkbox for 'Change FTP Listening Port' (unchecked) and a 'Port Number' field set to '21'.

Note: After configuring the above options you will be prompted to **Restart** your terminal.